 


SD-020-1 / SD-030-1 Amenity Dome in 2 / 3 Mat & Sheet Set

Thank you for purchasing a Snow Peak product. This product is a set comprised of the inner mat and ground sheet, designed specifically for the Amenity Dome. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

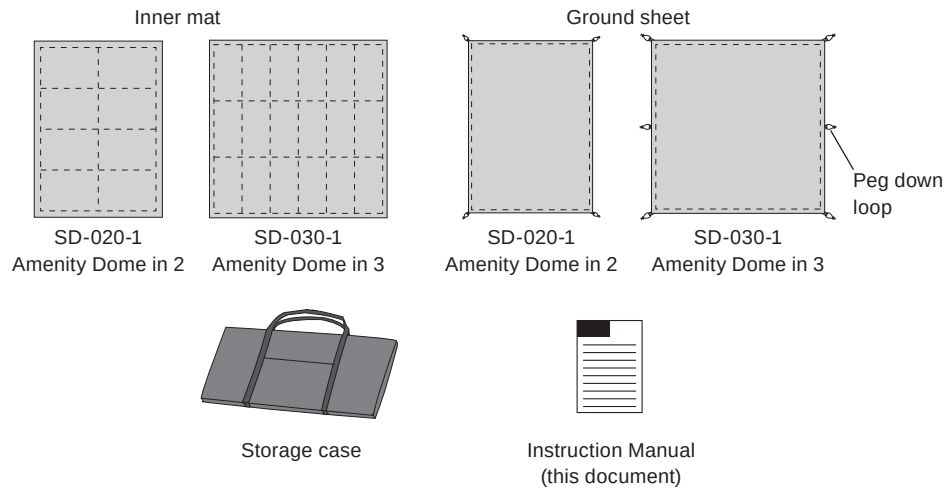

Specifications

		SD-020-1 Amenity Dome in 2 Mat & Sheet Set	SD-030-1 Amenity Dome in 3 Mat & Sheet Set
Inner mat	Material	Outer fabric, lining fabric / 68D Polyester Taffeta PU coating, Core / Polyethylene Foam 5mm/0.2"	
	Size	150×210cm/59.1" × 82.7"	255×255cm/100.4"×100.4"
	Storage size	76×5×55(h)cm /29.9"×2.0"×21.7"	88×13×45(h)cm/34.6"×5.1"×17.7"
	Weight	1.0kg/2.2lbs	1.7kg/3.8lbs
Ground sheet	Material	75D Polyester Taffeta PU coating, Water pressure rating: 1,800mm minimum	
	Size	145×205cm /57.1"×80.7"	255×255cm/100.4"×100.4"
	Storage size	39×26cm/15.4"×10.2"	25×38cm/9.8"×15.0"
	Weight	0.3kg/0.7lbs	0.6kg/1.3lbs

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

•The material of this product is not flame-proof. •Do not use combustion-based heat sources such as lanterns, stoves, heaters, or open flames such as matches, candles, lighters, or cigarettes near or inside inner tent. The use of fire in a confined space is very dangerous due to the risk of fire. •Do not keep fuel or flammable items for replenishing the fuel near the inner mat or ground sheet.

⚠ WARNING / Misuse could result in serious injury or death.

•Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.

 
⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

•Use on a flat surface free of sharp objects such as pointed stones or broken tree branches. •Sunlight can cause the surface of the inner mat and ground sheet to heat up, potentially causing low-temperature burns. •Flying sparks can create holes in the fabric. Do not set up, disassemble or use the products close to a bonfire or fireworks. •During set up and disassembly, please firmly grasp the inner mat and ground sheet, so it is not blown away by the wind. •Be sure to secure all the loops on the ground sheet. •The inner mat and ground sheet are not intended for permanent use, as the material may deteriorate or lose strength if exposed to sunlight for a long time. •The PU coating may be damaged by agricultural chemicals, which cause the water pressure resistance to decrease abnormally. Please note that the product will not be covered by the warranty if it is damaged by agricultural chemicals.

Instructions for Use

[How to install the ground sheet]


(1) Place the ground sheet inside the main body of the Amenity Dome with the PU coating surface (the shiny surface) facing up. Make sure that the product is oriented to the shape of Amenity Dome.

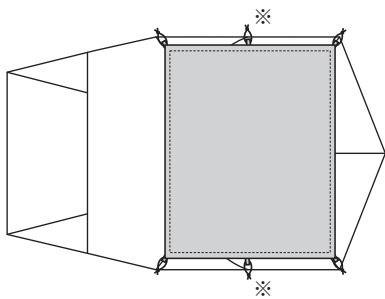

(2) Stretch the elastic loops at each corner of the ground sheet and hook them onto the corresponding pegs.

Attaching points:

 
- SD-020-1 Amenity Dome in 2: 4 points
- SD-030-1 Amenity Dome in 3: 6 points

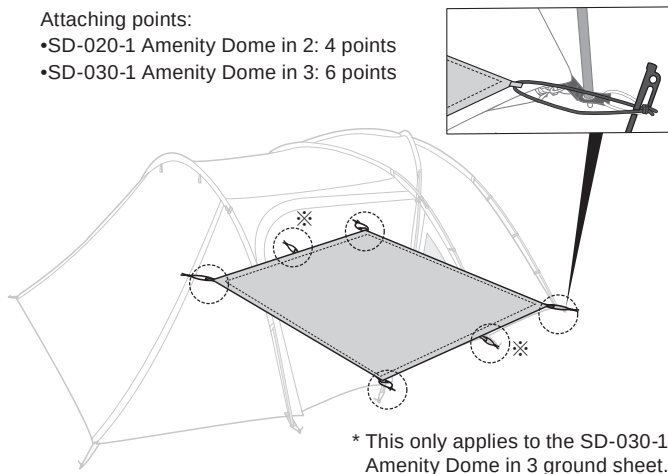


[How to store the inner mat]

Fold the inner mat as shown below and place it in the storage case.

 SD-020-1
Amenity Dome in 2

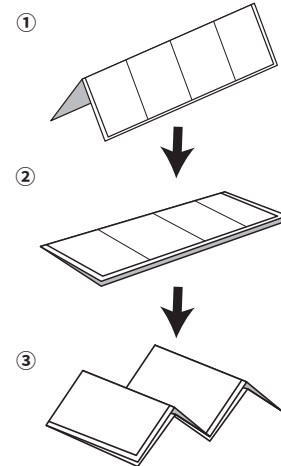

SD-030-1
Amenity Dome in 3

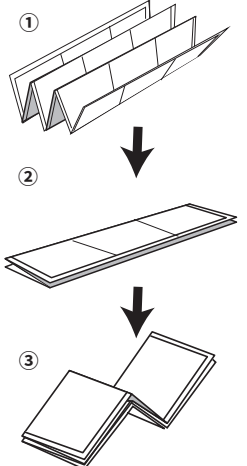 

Maintenance

•Clean and dry the product sufficiently before storing. If the product is stored when wet, the build-up of mold, bad odors, color migration, and material deterioration will occur. Dry the product sufficiently in a breezy and shaded area and clean the surface with a soft brush before storing. •This product cannot be washed. •Store the product in a well-ventilated area, away from heat and moisture. •Depending on the conditions during use, the material may deteriorate over a wide area, losing durability and becoming irreparable.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1.Material deterioration caused by age. / 2.Damage caused by modifications or rough handling. / 3.Damage caused by inappropriate use not mentioned in the instruction manual. / 4.Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6.Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8.Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused using the product in combination with another manufacturer's products.

Repair

•If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service. •When you request repairs, please make sure that the product is dry and clean. •Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred. •Transportation and repair costs are determined as follows. 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.