 


TP-672-1

Landlock X Mat & Sheet Set

Thank you for purchasing a Snow Peak product. This product is a set comprised of the inner mat and ground sheet, designed specifically for the Landlock X. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

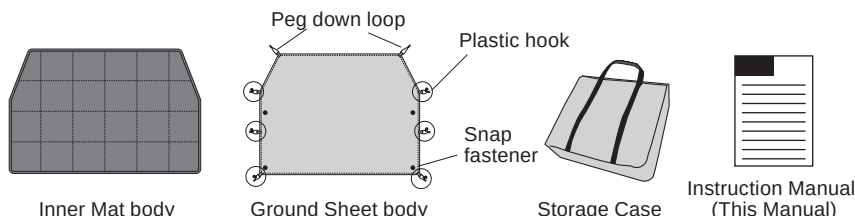

Specifications

Storage Size : 61×16×61(h)cm / 24"×6.3"×24"(h)

[Inner Mat]

Material: Outer fabric, lining fabric/ 68D Polyester, PU Coating
Waterproof Rating: 450mm minimum, Water Repellent
Finish, Inner Filling/ 5mm Polyethylene Foam
Weight: Approx. 1.9kg / 4.2lbs

[Ground Sheet]

Material: 150D Polyester, PU Coating Waterproof Rating: 1,800mm minimum, Water Repellent Finish
Weight: Approx. 1.0kg / 2.2lbs

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ DANGER / Misuse could easily result in a serious accident or death.

•The material of this product is not flameproof. Never use combustion-based heat sources such as lanterns, stoves, or heaters, or open flames such as matches, candles, lighters, or cigarettes, above or near the product. The use of such heat or light sources is hazardous and may result in fire. •Do not keep fuel, or flammable items for replenishing the fuel, near the product.

⚠ WARNING / Misuse could result in serious injury or death.

•Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

•Use on a flat surface free of sharp objects such as pointed stones or broken tree branches. •Sunlight can cause the surface of the inner mat and ground sheet to heat up, potentially causing low-temperature burns. •Flying sparks can create holes in the fabric. Do not set up, disassemble or use the products close to a bonfire or fireworks. •During set up and disassembly, please firmly grasp the inner mat and ground sheet, so it is not blown away by the wind. •Be sure to secure all the loops on the ground sheet. •The inner mat and ground sheet are not intended for permanent use, as the material may deteriorate or lose strength if exposed to sunlight for a long time. •The PU coating may be damaged by agricultural chemicals, which cause the water pressure resistance to decrease abnormally. Please note that the product will not be covered by the warranty if it is damaged by agricultural chemicals.

Instructions for Use

You can adjust the size of the ground sheet and inner mat for two or four people. Use it in your preferred layout depending on your requirements.


[How to attach the ground sheet]

① Lay the ground sheet inside the shelter body with the logo facing up.


Check the orientation of this product so that the shape of the ground sheet matches that of the shelter.

② Stretch the rubber loop on each corner and secure them as shown below.

[For four people]

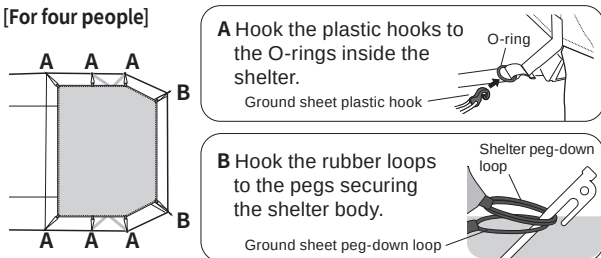

[For two people]

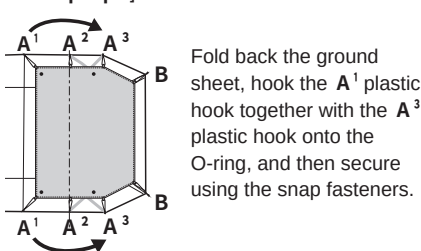


[How to use the inner mat]


Lay the inner mat inside the inner room.

Check the orientation of the inner mat so that it matches the shape of the inner room.

[For four people]

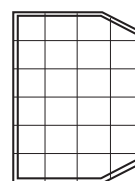

[For two people]

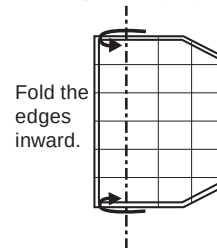

Maintenance

•Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair. •Clean and dry the product sufficiently before storing. If the product is stored when wet, the build-up of mold, bad odors, color migration, and material deterioration will occur. Dry the product sufficiently in a breezy and shaded area and clean the surface with a soft brush before storing. •Store the product in a well-ventilated area, away from heat and moisture. •Depending on the conditions during use, the material may deteriorate over a wide area, losing durability and becoming irreparable.

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused using the product in combination with another manufacturer's products.

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1(888)424-4916 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

MADE IN CHINA